ONE-YEAR LIMITED WARRANTY

This VillaWare product is protected against defects in materials and workmanship for one year from the date of original purchase. If the product proves to be defective in materials or workmanship during this period, it will be repaired or replaced free of charge.

This warranty does not apply to damage resulting from misuse, accidents or alterations to the product, or to damages incurred in transit. This warranty does not apply to power cords or plugs.

If you experience a problem with your VillaWare product, please contact Consumer Service. You will be instructed on where to send your product for returns. All returns must be carefully packed and made transportation prepaid with a description of the claimed defect.

VillaWare
Consumer Service 866-484-5529
villawareservice@tilia.com

For additional information on the VillaWare product line, see your dealer or visit our website at www.villaware.com

THE LINE OF FINE VILLAWARE PRODUCTS INCLUDES:

Wafflers
Pizzelle Bakers
Panini & Contact Grills
Electric Skillets
Crepe Makers
Electric Meat Grinders
Disney Licensed Series by VillaWare
Imperia® & Al Dente™ Pasta Machines
Cookie Presses
Smoothee-Bar™ Blenders
Bravo™ Pizza Stones
VillaClassic™ Cookware
Italian Style Gadgets & Utensils

...and hundreds more Classic Italian Kitchenware products from VillaWare

Also look for the award-winning UNO™ line of kitchen electrics including wafflers, panini grills, warming trays, toasters and more.

Copyright © 2005 Tilia, Inc. All rights reserved. VillaWare, Moderno, Al Dente, Smoothee-Bar, Bravo, VillaClassic and UNO are trademarks or registered trademarks of Tilia Int'l., Inc. in the United States and other countries. All other trademarks are property of their respective owners. VillaWare is distributed by Tilia Inc., a Jarden Company. This material may not be reproduced or redistributed in any fashion without the express written consent of Tilia, Inc.

VillaWare®

MODERNO™ SERIES

CITRUS JUICER

Make delicious and nutritious fresh juices

Instructions

Please read all instructions carefully and keep this booklet for future reference.

V410-41002-U00 (4/05)

www.villaware.com

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before using.
2. This juicer is designed for household use only.
3. Do not use this appliance for other than intended use.
4. To protect against risk of electrical shock, do not immerse juicer or electrical cord in water or other liquid. If juicer falls into liquid, unplug the cord from outlet immediately. DO NOT reach into the liquid.
5. Do not let cord hang over edge of table or counter, or touch hot surfaces, including stove.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, is dropped or damaged in any manner, or is not operating properly. Return appliance to VillaWare for repair or replacement.
7. Close supervision is necessary when the appliance is used by or near children.
8. Do not use outdoors or anywhere the cord or motor body might come into contact with water while in use.
9. The use of attachments not recommended or sold by the manufacturer, may cause fire, electric shock or injury.
10. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
11. Avoid contact with moving parts.
12. To disconnect, grip plug and pull from wall outlet. Never pull on cord.
13. Do not operate juicer in water or under running water.

HOUSEHOLD USE ONLY
SAVE THESE INSTRUCTIONS

ELECTRICAL REQUIREMENTS

A short power-supply cord is provided to reduce the hazard resulting from entanglement or tripping over a longer cord. An extension cord may be used with care; however, be sure the marked electrical rating is at least as great as the electrical rating of this appliance. The extension cord should be positioned such that it does not drape over the counter or tabletop where it can be pulled on by children or tripped over. The electrical rating of this appliance is listed on the bottom panel of the unit.

POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

FEATURES OF YOUR JUICER

- Two juicing cones have pointed tips and deep ridges for maximum juice extraction. Cones have built-in pulp scrapers to constantly clear pulp from strainer, allowing juice to flow through more quickly. The small cone is ideal for limes, lemons and small oranges. The large cone is ideal for grapefruits and large oranges.
- Stainless steel strainer separates pulp and large seeds from juice.
- Two-position drip spout allows you to close the spout and collect the juice in the juice container, or to open the spout and dispense the juice into a glass or other container as it accumulates. Press down on spout to open; pull up to close without drip or mess. Angled juice container allows juice to flow freely and quickly toward the spout.
- Sturdy motor base eliminates movement of juicer on counter while in use.
- The cord winds under the motor base, providing for length adjustment and storage.
- Cover keeps juicer dust-free when not in use.

GETTING FAMILIAR WITH YOUR JUICER

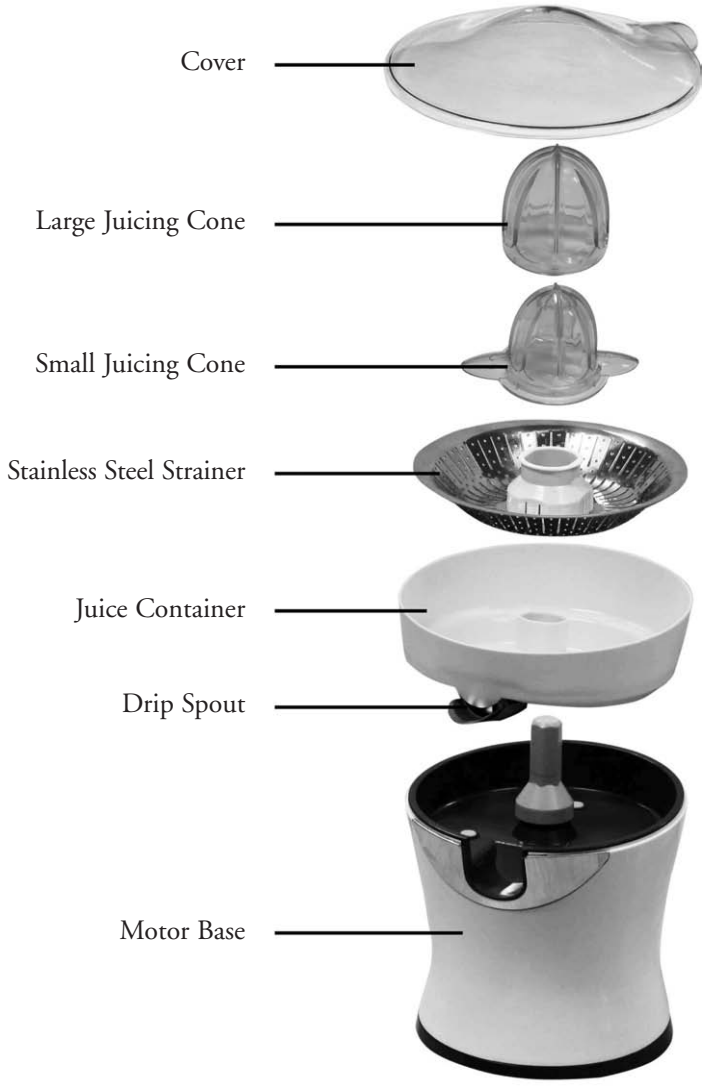

NOTE: Actual product color may differ from that shown in diagram.

ASSEMBLING YOUR JUICER

Before your first use, wash all parts, except motor base, in warm, soapy water. If attached, be sure to separate the two juicing cones. Grip top cone without touching bottom edge; pull off bottom cone by pulling on one of the scrapers until cones separate. Rinse and dry well. Wipe motor base with a warm sudsy cloth, then wipe clean with a damp cloth. Dry with a soft cloth. Never immerse motor base in water as this will damage the motor.

1. Place the motor base on a flat, level surface.
2. Place black juice container over drive shaft, aligning the drip spout with the opening in the base.
3. Place stainless steel strainer onto drive shaft, rotating it until it falls into place and fits securely.
4. If juicing large fruits (grapefruits or large-size oranges), place large cone onto small cone, lining up the scrapers on the small cone with the cut openings in the large cone. Snap cones together to lock. Place over drive shaft, rotating slightly to lock into position. If juicing small fruits (limes, lemons, small oranges or tangerines), do not attach large cone to small one. Simply place small cone over drive shaft, rotating slightly to lock into position.
5. Adjust the length of the power cord, coiling any excess cord into the bottom on the base. Plug the juicer into 110/120 volt AC wall outlet.
6. If collecting juice in a glass or other container, place under drip spout. The glass or container can not be taller than 4½ inches. Press down on drip spout to open. To collect juice in black container, be sure drip spout is in the raised and locked position before beginning to juice. Your juicer is now ready to use.

USING YOUR JUICER

1. Be sure your juicer is correctly assembled before using.
2. Cut citrus fruits crosswise in half, cutting across segments.
3. Place fruit, cut side down, over juicer cone; press down to begin rotation of the juicing cone.
4. While holding fruit on the cone, tilt fruit slightly and squeeze the sides of the fruit to ensure good contact with the juicer cone. Resist from pressing too hard into the rind, as off-flavors from the rind may release into the juice.
5. Release pressure from fruit to stop rotation of the juicer.
6. When removing accumulated pulp from the strainer, lift strainer and cone from drive shaft; empty pulp and seeds into trash can.

SAFE OPERATION OF YOUR JUICER

1. Be sure juicer is correctly assembled before using.
2. Do not run juicer continuously for longer than 5 minutes. Allow to rest at least 2 minutes to allow motor to cool.

CLEANING YOUR JUICER

1. Be sure your juicer is unplugged before cleaning.
2. Remove the cone(s), strainer and juice container from the motor base. Wash all parts with warm, soapy water; rinse well. Do not use abrasive scouring pads. For thorough cleaning, press down on drip spout to its open position. Spout can not be detached from the container. Wipe motor base with a damp cloth.

IMPORTANT:

- NEVER immerse motor base in water or other liquid.
- Do not use abrasive cleaners on any part of the juicer.

JUICING TIPS

1. Look for citrus fruits that are firm, plump and heavy for their size with bright, colorful skins. Avoid fruits that are bruised or wrinkled.
2. Rinse citrus fruits to remove any pesticides or residues before juicing.
3. If citrus zest or grated rind is needed for a recipe, zest or grate rind before juicing.
4. Use room temperature fruits for maximum juice. If the fruit is very cold, it can be microwaved for a few seconds before juicing.
5. To loosen up the fibers and release more juice, roll the uncut fruit along the countertop with the palm of your hand, pressing down firmly but gently.
6. When squeezing oranges, it is best to use a juicing variety, such as Valencia oranges. When juicing Navel oranges, squeeze only as much as needed. Navel orange juice should be served within 4 hours of squeezing because the juice will turn bitter over time, even if refrigerated.
7. It is also best to consume freshly-squeezed citrus juices soon after juicing for maximum vitamin C content. Vitamin C degrades quickly when exposed to oxygen. Refrigerating the juice will help minimize the loss.

AVERAGE CITRUS YIELDS

Fruit	**Approximate yield from 1 pound of fruit**	**Approximate yield from 1 piece of fruit**
Limes	1 pound is about 6 to 8 limes ⅔ to ¾ cup juice	1½ to 2 tablespoons juice 1 to 3 teaspoons zest
Lemons	2 pound is about 4 to 6 lemons 1 cup juice	3 tablespoons juice 2 to 3 teaspoons zest
Oranges	3 pound is about 2 to 4 oranges 1 cup juice	⅓ to ½ cup juice 3 to 4 teaspoons zest
Grapefruits	1 pound is about 1 grapefruit ⅔ to 1 cup juice	1 pound is about 1 grapefruit ⅔ to 1 cup juice